

RVtravel.com's Seasonal RV Maintenance Calendar

Use this calendar to plan your preventive RV maintenance throughout the year. Each seasonal section includes tasks commonly done by experienced RVers to ensure reliability and comfort on the road.

Spring (March–April)

- Lubricate slideouts, seals, and compartment locks
- Test battery voltage and load capacity
- Flush water heater and inspect/replace anode rod
- Inspect and reseal roof joints and seams
- Test smoke, CO, and LP gas detectors

Summer (June–July)

- Check all tires for wear, cracks, and proper inflation
- Inspect trailer brakes and repack wheel bearings (if applicable)
- Clean A/C filters and check rooftop A/C unit operation
- Inspect undercarriage and hitch system for wear or damage
- Check and lubricate step mechanisms

Fall (September–October)

- Deep-clean black and gray tanks; clean tank sensors
- Inspect furnace, vents, and propane delivery lines
- Recalibrate leveling system (if needed)
- Replace damaged weatherstripping or insulation
- Inspect roof before winter weather hits

Winter (December–January)

- Check battery voltage and disconnect if in storage

- Run dehumidifiers or moisture absorbers (stationary rigs)
- Inspect plumbing and underbelly for freeze protection
- Cycle slides, jacks, and stabilizers monthly to prevent sticking
- Purge and reorganize storage bays